 


Easy Installation:

- Replaces any 3/4" keyed cam lock
- 1 Cam upon request
- Cam can be set to rotate clockwise or

 
counterclockwise

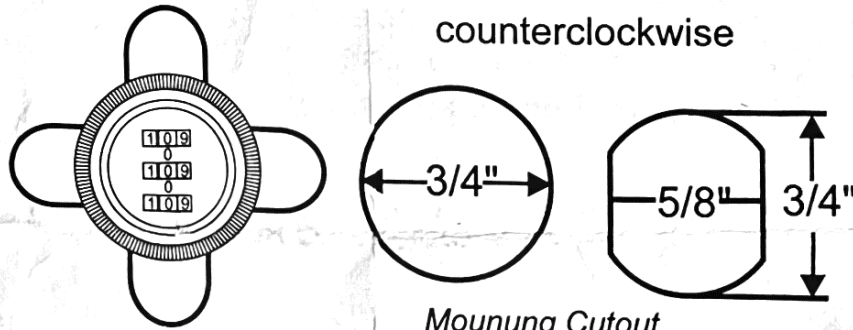

Mounting Cutout

Set your own combination

The combination can be changed in seconds - without special tools or disassembly.

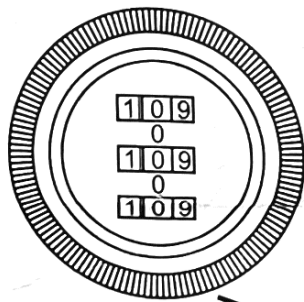

1.000 Combinations possible

Changing the combination only takes a few seconds with a simple push of the change button.

Change Button

Easy instructions to reset combination any time:

- Combination must be on opening number prior to resetting (factory default is 0-0-0)
- On the underside outer edge of the lock there is hole for the code reset button. Rotate the face of cam until the code reset button comes into view.
- Push this pin in with a paper clip and keep it pushed in.
- Set your personal combination turning the dials to the desired combination.
- Release the reset button and your combination is set.
- To lock, close the lock and rotate lock to "locked" position. Rotate one or more dials after lock is closed. To open the lock, set your personal combination.