

Quick Start Guide

48-Port 1U Rack-Mount Unshielded Blank Keystone/ Multimedia Patch Panel

Model: N062-048-KJ

Este manual está disponible en español en la página de Tripp Lite:
triplite.com

Ce manuel est disponible en français sur le site Web de Tripp Lite :
triplite.com

Русскоязычная версия настоящего руководства представлена на
веб-сайте компании Tripp Lite по адресу: triplite.com

Dieses Handbuch ist in deutscher Sprache auf der Tripp Lite-Website
verfügbar: triplite.com

WARRANTY REGISTRATION

Register your product today and be automatically entered to
win an ISOBAR® surge protector in our monthly drawing!

triplite.com/warranty




1111 W. 35th Street, Chicago, IL 60609 USA • triplite.com/support

Copyright © 2022 Tripp Lite. All rights reserved.

Installation

Insert/Remove Clear ID Window

- 1** Insert the clear ID window into the holder.
- 2** To remove, bend the clear ID window on both sides.

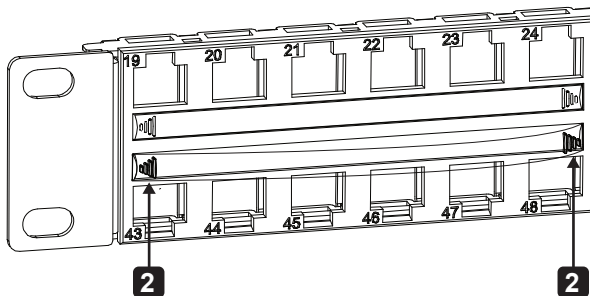


Installation

Insert Keystone Jack

Notes:

- It is highly recommended that keystone jacks be installed after they have terminated.
- Install keystone jacks in the top row first.

- 1** On the rear side of the patch panel, hook the terminated keystone jack over the bottom ledge of the blank cutout.
- 2** Tilt the keystone jack into the port and press firmly on the keystone jack latch. Using a flathead screwdriver or your hands, secure the keystone jack by snapping it into the cutout.

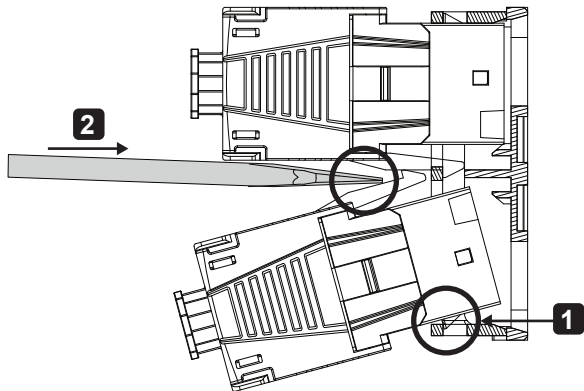

Installation

Remove Keystone Jack

- 1 Using a flathead screwdriver, press the keystone jack latch.



1111 W. 35th Street, Chicago, IL 60609 USA • [tripplite.com/support](https://www.tripplite.com/support)