

# Owner's Manual

## USB-C™ to 4K HDMI over Cat6 and KVM Extender Kit

Model: B127A-1A1-BCBH

Este manual está disponible en español en la página de Tripp Lite:  
[triplite.com](http://triplite.com)

Ce manuel est disponible en français sur le site Web de Tripp Lite :  
[triplite.com](http://triplite.com)

Русскоязычная версия настоящего руководства представлена на  
веб-сайте компании Tripp Lite по адресу: [triplite.com](http://triplite.com)

Dieses Handbuch ist in deutscher Sprache auf der Tripp Lite-Website  
verfügbar: [triplite.com](http://triplite.com)

### WARRANTY REGISTRATION

Register your product today and be  
automatically entered to win an ISOBAR®  
surge protector in our monthly drawing!

[triplite.com/warranty](http://triplite.com/warranty)



1111 W. 35th Street, Chicago, IL 60609 USA • [triplite.com/support](http://triplite.com/support)

Copyright © 2020 Tripp Lite. All rights reserved.

## **Package Contents**

- Transmitter and Receiver Units
- External Power Supply (Input: 100-240V, 50/60 Hz, 0.6A; Output: 24V/1A)
- Plug Adapters: NEMA 1-15P (North America), CEE 7/16 Schuko (Europe), BS 1363 (UK) and AS/NZS 3112 (Australia)
- Mounting Hardware
- Owner's Manual

### **Optional Accessories**

- N202-Series Cat6 24 AWG Solid-Wire Patch Cables
- P569-XXX-CERT or P568-XXX-2A Series High-Speed HDMI 2.0 Cables
- U420-Series USB-C 3.1 Gen 1/2 Cables

## Product Features

- Extends 4K x 2K (3840 x 2160) @ 60 Hz video (as specified in HDMI 2.0) up to 230 ft. (70 m) from the source
- Built-in local HDMI port supports a 4K x 2K (3840 x 2160) @ 60 Hz signal
- USB Type-C PD 3.0 port provides up to 90W of charging power
- Remote receiver unit includes built-in equalization (EQ) control and auto EDID image adjustment
- Supports up to 7.1-channel surround sound audio
- Receiver includes a built-in Toslink port for audio extraction
- HDCP 2.2 compatible
- Plug and play—no software or drivers required
- Supports bi-directional IR and USB 1.1 via DIP switch selection
- Includes mounting hardware that enables both the local transmitter and remote receiver units to be wall-mounted, rack-mounted or pole-mounted

## Disclaimer

Before installation, please check the following settings of your source(s) and TVs/monitor(s):

1. Set display to 60 Hz. Double-check factory settings, as default can be set to a lower frequency (Hz) than advertised.
2. Ensure the input setting of your monitor is set at HDMI 2.0. Some displays may have default setting at HDMI 1.4.
3. Check if the Ultra HD (UHD) Deep Color setting is enabled on your TV/monitor. Confirm with your TV/monitor manufacturer which HDMI ports support UHD Deep Color.
4. Check the USB/IR switch. The default setting is “IR”.

**Note:** To connect a local monitor to your installation, the UHD Deep Color setting may need to be disabled on your local TV/monitor (depending on make/model) to achieve 4K / 60 Hz resolution.

## Mounting Instructions

The B127A-1A1-BCBH includes mounting hardware that allows for a variety of mounting methods. The following images illustrate how the included mounting brackets can be attached for different installations.

**Note:** The model shown in the images below is for illustrative purposes only. Your product may vary by model number, size or port orientation. The mounting options for all over IP units are the same.

### Wall-Mount



### 19" Rack-Mount




### Pole-Mount



# Installation

## Notes:

- Make sure all equipment in the installation—such as TVs, a Type-C notebook PC and the transmitter—is powered OFF.
- Test to ensure the entire installation works properly before pulling cables through ceilings/walls.
- To achieve maximum distance and performance, use 24 AWG solid wire Cat6 cable. Using stranded-wire Cat6 cable, or cable with a gauge (AWG) size higher than 24 AWG, will result in shorter extension distance. Higher gauge cabling, such as 26 AWG, has a more limited transmission capability than lower gauge cabling. All Tripp Lite N202-Series Cat6 cables are made with 24 AWG solid-wire cabling.
- External power is not required for remote receiver units due to Power-over-Cable (PoC) technology incorporated in the transmitter units.

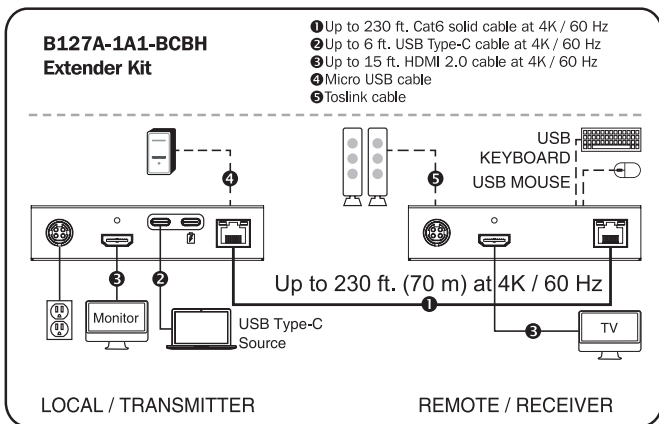

## Installation

1. Using a USB 3.0 Type-C cable, connect the USB Type-C source to the INPUT port on the local transmitter unit.
2. **Optional:** Using an HDMI 2.0 cable (such as Tripp Lite P569-XXX-CERT or P568-XXX-2A Series cables), connect a local monitor to the LOCALOUT port on the B127A-1A1-BCBH local transmitter unit.
3. Using Cat6 cable, connect the RJ45 port on the local transmitter unit to the RJ45 port on the remote receiver unit.
4. Using an HDMI 2.0 cable (such as Tripp Lite P569-XXX-CERT or P568-XXX-2A Series cables), connect the remote receiver unit's HDMI port to a monitor.
5. Turn the power on to your connected TVs/monitors. The LOCAL (orange) LED will illuminate to indicate the local port is connected to a display.
6. Connect the external power supply to the local transmitter unit and plug it into an available wall outlet or (optional) a Tripp Lite Surge Protector, Power Distribution Unit (PDU) or Uninterruptible Power Supply (UPS). The POWER (green) LED on the local transmitter unit will illuminate to indicate the unit is receiving power from the external power supply. The POWER (green) LED on the remote receiver unit will illuminate to indicate the unit is receiving power from the local transmitter unit through PoC technology.
7. Turn on the power to the USB Type-C source. The OUTPUT (orange) LED on the local transmitter unit will illuminate to indicate a signal is received from the source.
8. The (orange) RJ45 LED will illuminate on both the local transmitter unit and remote receiver unit to indicate a signal is received from source to display. The screen should now display on the connected monitor.

## USB/IR/Toslink Controls

The extender kit provides the following functional controls:

- **USB 1.1** – One Micro-USB input at transmitter, dual USB-A outputs at receiver
- **Bi-Directional IR** – Dual 3.5 mm jacks at both the transmitter and receiver
- **Toslink** – Audio output at receiver

**Note:** All of the following USB/IR/Toslink steps are optional. For port locations, refer to the diagram in the **Extender Kit Installation** section.

### IR Control

1. Connect a user-supplied IR-OUT cable to the transmitter unit's IR-OUT port. Place the sensor on the IR-OUT cable in an unobstructed area within clear view of the device being controlled. Then connect a user-supplied IR-IN cable to the receiver unit's IR-IN port. The IR-IN cable will communicate the desired command via the transmitter's IR-OUT cable.

**Note:** The IR-OUT cable receives the signal from the remote control and sends it to the device being controlled (e.g. Blu-ray™ player, etc.).



## **USB/IR/Toslink Controls**

### **USB Control**

1. With a user-supplied USB Micro-B cable (such as Tripp Lite U050-XXX Series USB cable), connect to the transmitter's Micro-B port. Then connect a keyboard and mouse to the available USB-A ports on the receiver unit.

### **Toslink Control**

1. With a user-supplied Toslink cable (such as Tripp Lite A102-XXM Series cables), connect an audio receiver, compatible speaker(s) or other audio system equipped with a Toslink digital input.

# Warranty and Product Registration

## 1-Year Limited Warranty

TRIPP LITE warrants its products to be free from defects in materials and workmanship for a period of one (1) year from the date of initial purchase. TRIPP LITE's obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. To obtain service under this warranty, you must obtain a Returned Material Authorization (RMA) number from TRIPP LITE or an authorized TRIPP LITE service center. Products must be returned to TRIPP LITE or an authorized TRIPP LITE service center with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, TRIPP LITE MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL TRIPP LITE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, TRIPP LITE is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

# Warranty and Product Registration

## PRODUCT REGISTRATION

Visit [tripplite.com/warranty](http://tripplite.com/warranty) today to register your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!\*

\* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.



### WEEE Compliance Information for Tripp Lite Customers and Recyclers (European Union)

Under the Waste Electrical and Electronic Equipment (WEEE) Directive and implementing regulations, when customers buy new electrical and electronic equipment from Tripp Lite they are entitled to:

- Send old equipment for recycling on a one-for-one, like-for-like basis (this varies depending on the country)
- Send the new equipment back for recycling when this ultimately becomes waste

Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended.

Tripp Lite has a policy of continuous improvement. Specifications are subject to change without notice. Photos and illustrations may differ slightly from actual products.



**1111 W. 35th Street, Chicago, IL 60609 USA • [tripplite.com/support](http://tripplite.com/support)**