

2-Port DisplayPort 1.4 KVM Switch 4K Video, Audio and Peripheral Sharing

Model:
B005-DPUA2-K



Purchased product
may differ from image.

Este manual está disponible en español en la página de Eaton:
Tripplite.Eaton.com/support

Ce manuel est disponible en français sur le site Web de Eaton :
Tripplite.Eaton.com/support

Dieses Handbuch ist in deutscher Sprache auf der Eaton-Website verfügbar:
Tripplite.Eaton.com/support

Questo manuale è disponibile in italiano sul sito web di Eaton:
Tripplite.Eaton.com/support

EATON

Powering Business Worldwide

Package Contents

- B005-DPUA2-K 2-Port DisplayPort 1.4 KVM Switch
- IR Extender
- IR Remote Control
- (2) USB 3.2 Gen 1 A/B Device Cables (M/M)
- External Power Supply (Input: 100–240V, 50/60 Hz, 0.5A; Output: 5V 3A)
- Owner's Manual

Optional Accessories

- P785-DPKIT06 or P785-DPKIT10 KVM Cables
- U322-Series USB 3.2 Gen 1 A/B Device Cables
- P312-Series Mini Stereo Audio Cables
- P580-Series DisplayPort Cables with Latches
- P568-Series High-Speed HDMI Cables

System Requirements

Console:

- DisplayPort monitor capable of supporting the highest resolution of any computer in the installation
- USB keyboard and mouse
- Microphone and speakers with 3.5 mm mini stereo connectors (optional)

Computer:


- DisplayPort input
- USB Type-A port
- 3.5 mm mini stereo microphone and speaker jacks (optional)
- Windows 2000/XP/Vista/Win7/Win8/Win10, Linux or Apple Mac OS operating system

Product Features

- Controls 2 DisplayPort computers from a single DisplayPort video console
- Supports True 4K @ 60 Hz video resolutions, including 4:4:4 HDR and HDCP 2.2
- DisplayPort 1.4 compliant
- Supports RGB 4:4:4/ YCbCr 4:4:4/ YCbCr 4:2:2/ YCbCr 4:2:0
- DisplayPort outputs support 16 bits per channel (48-bit all channels) Deep Color and 8.1 Gbps per channel (32.4 Gbps all channels) bandwidth
- HDMI output supports 12 bits per channel (36-bit all channels) Deep Color and 6 Gbps per channel (18 Gbps all channels) bandwidth
- Built-in 2-port USB 2.0 hub allows USB devices to be shared between computers connected to the KVM switch
- 3.5mm mini stereo jacks allow a microphone to provide audio input to each connected computer and let you listen to audio output on a set of speakers
- Additional console audio jacks are conveniently located on the front panel, making them ideal for use with speakers and microphones
- Switch between connected computers via front-panel pushbuttons, IR remote, mouse movement or keyboard hotkeys
- Supports hot-plugging – computers and devices can be unplugged and re-plugged without having to shut down the KVM switch
- Quick installation without the need for software
- Stores the monitor's EDID (Extended Display Identification Data) to optimize display resolution

Panel Descriptions


Front Panel

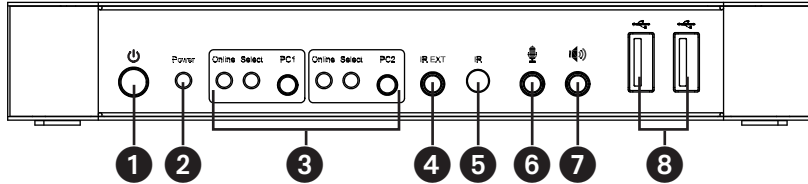

- 1 Power** – Press to turn the unit on and off.
- 2 Power Indicator** – Illuminates red to signal the DC power supply is connected to an outlet and the KVM switch is turned on.
- 3 Input Selector** – Illuminates blue to indicate whether PC1 or PC2 has been selected. Select LEDs flash in a loop during automatic switching mode. Online LEDs illuminate when the corresponding USB-B port is connected.
- 4 IR EXT** – Connect the included IR Extender for IR signal reception from the included IR Remote Control.
- 5 IR** – Signal reception point for the IR Remote Control.
- 6 3.5 mm Microphone** – Connect a microphone.
- 7 3.5 mm Stereo** – Connect a stereo audio device.
- 8 USB-A 3.2 Gen 1** – Connect USB peripherals (printers, scanners, U-disks, etc.)

Panel Descriptions

Rear Panel

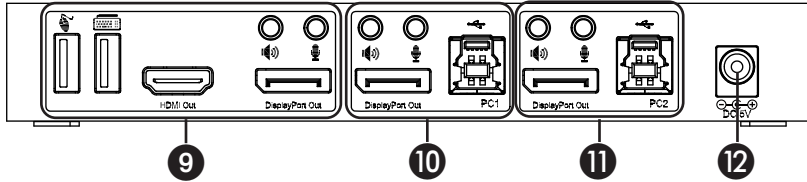

9 Outputs

- Connect a mouse and keyboard to the USB 2.0 ports.
- Connect an amplifier to the 3.5 mm stereo port.
- Connect a microphone to the 3.5 mm microphone port.
- Connect a local HDMI monitor to the HDMI Out port.
- Connect a local DisplayPort monitor to the DisplayPort Out port.

10 PC1 Input – Connect to a computer’s DisplayPort, USB, stereo audio and microphone ports.

11 PC2 Input – Connect to a second computer’s DisplayPort, USB, stereo audio and microphone ports.

12 DC 5V Input – Connect the included 5V/3A DC power supply.

Installation and Operation

Refer to the following steps and diagram to set up your KVM switch installation.

Note: Before making any connections, make sure power to all devices connected to the KVM switch is turned off. Unplug the power cords of any computers that have the Keyboard Power On function.




1. Connect computers to the USB-B input ports using USB cables. Connect the computers' microphone and stereo audio ports using 3.5 mm audio cables. Connect computers to the "DisplayPort In" ports using DisplayPort cables.
2. Connect a keyboard and mouse to the USB-A ports on the rear panel. Connect a microphone and amplifier to the microphone and stereo audio ports using 3.5 mm audio cables. Connect a monitor to "DisplayPort Out" using a DisplayPort cable (maximum: 2 m) or to "HDMI Out" using an HDMI cable.

Note: When either "DisplayPort Out" or "HDMI Out" is connected, video is transmitted by the connected port automatically. When both ports are connected, the DisplayPort takes precedence.

Installation and Operation

3. Connect the included DC power supply, and press the Power button. The Power LED will illuminate. When computers are connected to the PC1 and PC2 ports, the Online LEDs will illuminate.
4. Press the buttons on the front panel to select the desired computer. The Select LED will illuminate to indicate which computer is currently selected. The monitor will show the corresponding image, and the selected computer can be controlled via keyboard and mouse.
5. The included IR Remote Control works the same as the pushbuttons:



- a. For input: "1" specifies PC1 and "2" specifies PC2.
 - b. For loop switching: Order is PC1>PC2>PC1>...
6. USB peripherals, such as printers, scanners and thumb drives, can be connected to the front-panel USB-A ports.

Special Function Operation

1. Mouse Traversal Function – Place the mouse on the far right of the monitor, and continue to slide it to the right for 2 seconds. The KVM switch will automatically switch to the next port. Switching order is PC1>PC2>PC1>...

2. USB-B Detection Switching Function:

- a. When the unit detects that a computer is connected to the USB-B port, the unit immediately switches to that computer, and the corresponding *Online* and *Select* LEDs illuminate. For instance, if PC1 is already connected, then PC2 becomes connected via USB-B, and the KVM will automatically switch to PC2.
- b. When the currently selected computer is powered off or the USB cable is dialed out, the KVM automatically switches to the next computer with the power on and the USB port connected.

3. Hotkey Function:

Number	Hotkey Combination	Function Description
1	[Scroll Lock]++¹ [Scroll Lock] + → or ↓	Switch to the next port
2	[Scroll Lock]++ [Scroll Lock] + ← or ↑	Switch to the previous port
3	[Scroll Lock]++ [Scroll Lock] + [X]²	Switch to PC "X"
4	[Scroll Lock]++ [Scroll Lock] + [S]³	Enable Automatic Switching (Default: 15 seconds)
5	[Scroll Lock]++ [Scroll Lock] + [I] + [N]⁴ + [Enter]	Set the Automatic Switching Interval (Between 5 ~ 999 Seconds)
6	[Scroll Lock]++ [Scroll Lock] + [B] + [1/0]⁵	Buzzer On/Off (Default: On)
7	[Scroll Lock]++ [Scroll Lock] + [F] + [L] + [A] + [S] + [H] + [Enter]	All resume hotkey default mode ⁶

Notes:

1) Hotkeys are not case-sensitive.

2) A noise sounds when switching between PC1 and PC2.

¹ "++" means to press **[Scroll Lock]** twice in rapid succession. For example: **[Scroll Lock] ++ [Scroll Lock] + [1]** means to press the Scroll Lock button twice in rapid succession and then press the number 1 button. The detection period between each hotkey code is 5 seconds. If the Scroll Lock button is pressed the first time and 5 seconds pass before the Scroll Lock button is pressed again, the hotkey code will be invalid.

Special Function Operation

- ² "X" indicates the PC input. For example, to switch to PC2, the hotkey combination is **[Scroll Lock] ++ [Scroll Lock] + [2]**.
- ³ Turning on this function will cause DisplayPort, microphone and speaker ports to enter automatic switching mode without USB. Press any key (except Spacebar) to exit to the port used prior to the automatic switching sequence. Press Spacebar to stay at the port currently in use. When automatic switching mode is enabled, the corresponding "Select" LED of the port currently in use will flash.
- ⁴ "N" indicates the number of switching interval, which can be 5 seconds to 999 seconds.
- ⁵ "1" means On, "0" means Off.
- ⁶ This mode only has relation to hotkey function #4 and #6.

Specifications

Connectors	
KVM Connectors (Female)	USB 3.2 Gen 1-B x2 (Rear) DisplayPort x2 (Rear) 3.5 mm Stereo x2 (Green, Rear) 3.5 mm Stereo x2 (Pink, Rear)
Console Connectors (Female)	USB 2.0-A x2 (Rear) DisplayPort x1 (Rear) HDMI x1 (Rear) 3.5mm Stereo x2 (Green, 1 Front, 1 Rear) 3.5mm Stereo x2 (Pink, 1 Front, 1 Rear)
USB Hub Connectors (Female)	USB 3.2 Gen 1-A x2 (Front)
Video Resolution	
Maximum Resolution	4K x 2K @ 60 Hz (4K UHD)
Operating Bandwidth	
HDMI Bandwidth	18 Gb
DisplayPort Bandwidth	32.4 Gb
Environmental	
Operating Temperature Range	32° ~ 113°F (0° ~ 45°C)
Operating Humidity Range	10% ~ 85% RH (No Condensation)
Storage Temperature Range	14° ~ 176°F (-10° ~ 80°C)
Storage Humidity Range	5% ~ 90% RH (No Condensation)
Power Requirement	
External Power Supply	DC 5V/3A
Power Consumption (Max)	12W
ESD Protection	
Human Body Model	+/- 8kV (Air Gap Discharge) +/- 4kV (Contact Discharge)

Warranty

3-Year Limited Warranty

We warrant our products to be free from defects in materials and workmanship for a period of three (3) years from the date of initial purchase. Our obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. Visit [TrippLite.Eaton.com/support/product-returns](https://www.tripplite.com/support/product-returns) before sending any equipment back for repair. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL WE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, we are not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

Eaton has a policy of continuous improvement. Specifications are subject to change without notice.



Powering Business Worldwide

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

© 2024 Eaton
All Rights Reserved
Publication No. 23-08-242 / 93-3C23_RevB
September 2024

Eaton is a registered trademark.

All trademarks are property
of their respective owners.